

## Mini Hi-Fi System

FW-C399



### **Read this manual first!**

*Congratulations on purchasing this Philips product. We've included everything you need to get started. If you have any problems, Philips Representatives can help you get the most from your new product by explaining:*

- Hookups,
- First Time Setup, and
- Feature Operation.

*Do not attempt to return this product to the store.*

***For fast help, call us first!***

***1-800-531-0039***

*Thank you for making Philips a part of your home!*



*Let's make things better.*



**PHILIPS**



## Canada

### English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

## CAUTION

***Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.***

## ATTENTION

***L'utilisation des commandes ou réglages ou le non-respect des procédures ci-incluses peuvent se traduire par une exposition dangereuse à l'irradiation.***

## ATENCIÓN

***El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.***

**This warning label is located on the rearside and inside this laser product.**

**CAUTION:** INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.


**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.

**VARO!** AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINANAKYMATTOAALLE LASERSATEILYLLE. ALA KATSO SATEESEEN.

**VARNING!** OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.

or

**DANGER -** Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

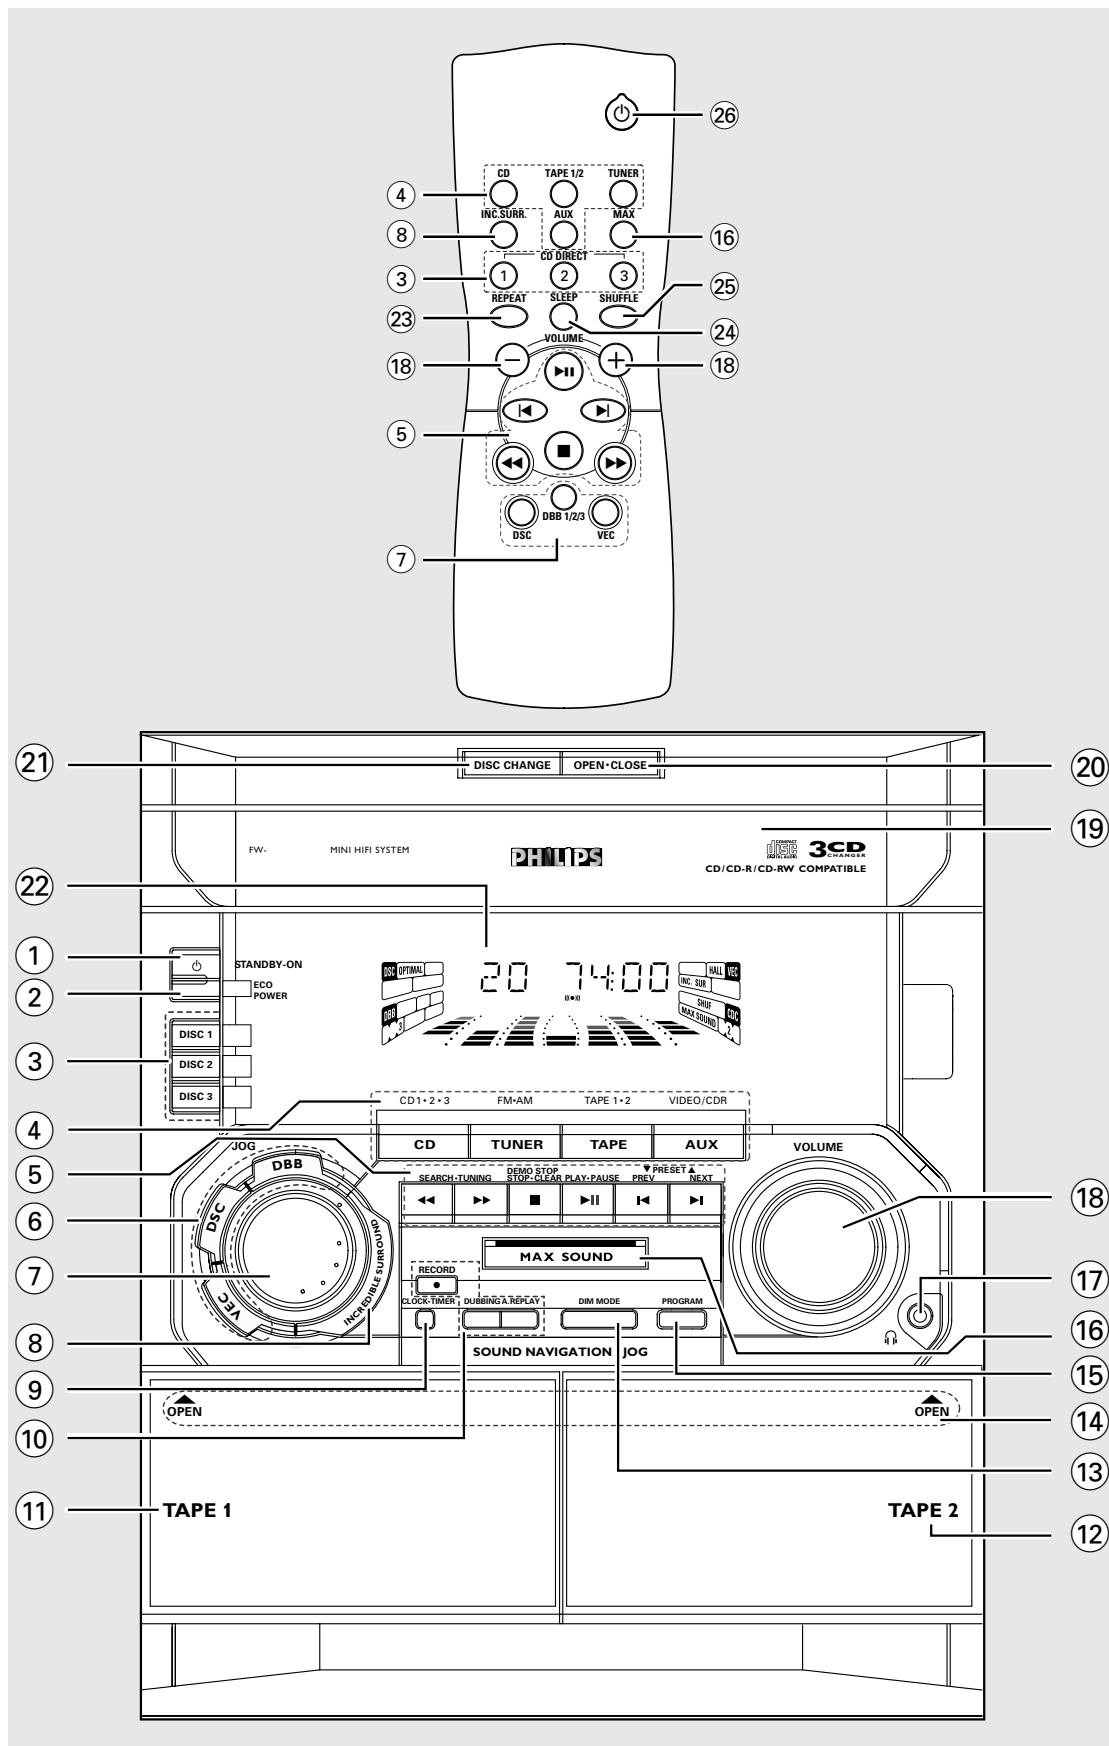



**Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.**

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

### • **Warranty Verification**

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

### • **Owner Confirmation**


Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.


### • **Model Registration**

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these  
*safety* symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

#### **For Customer Use**

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.



**PHILIPS** Visit our World Wide Web Site at <http://www.philips.com>

# PHILIPS



***Congratulations on your purchase,  
and welcome to the “family!”***

**Dear Philips product owner:**

Thank you for your confidence in Philips. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the Philips “family,” you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome – and thanks for investing in a Philips product.

Sincerely,

Lawrence J. Blanford  
President and Chief Executive Officer

**P.S. Remember, to get the most from your Philips product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.

2. Keep these instructions.

3. Heed all warnings.

4. Follow all instructions.

 
5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug.



A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12.



**Use only with the cart,** stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury or damage to the unit:

- Install **all** batteries correctly, **+** and **-** as marked on the unit.
- Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).
- Remove batteries when the unit is not used for a long time.

EL 6475-E003: 01/6

**Class II equipment symbol**



This symbol indicates that the unit has a double insulation system



## Index

English ..... 8

Français ..... 35

Español ..... 62

English

Français

Español

# Contents

## General Information

Supplied accessories .....	9
Environmental information .....	9
Safety information .....	9

## Preparations

Rear connections .....	10–11
Power	
Antennas connection	
Speakers connection	
Optional connection .....	11
Connecting other equipment to your system	
Inserting batteries into the remote control .....	11

## Controls

Controls on the system and remote control .....	12–13
---	-------

## Basic Functions

Plug and Play .....	14
Demonstration mode .....	14
Switching the system on .....	15
Switching the system to standby mode .....	15
Switching the system to Eco Power standby mode (< 1 watt) .....	15
Dim mode .....	15
Volume control .....	15
Sound navigation .....	16
MAX sound	
VEC (Virtual Environment Control)	
DSC (Digital Sound Control)	
DBB (Dynamic Bass Boost)	
Incredible Surround	

## CD Operation

Discs for playback .....	17
Loading discs .....	17
Playing discs .....	18
Selecting a desired track/passage .....	18
Replacing discs during playback .....	18
Repeat and Shuffle .....	18
Repeat play	
Random play	
Programming the disc tracks .....	19
Erasing the program .....	19

## Radio Reception

Tuning to radio stations .....	20
Storing preset radio stations .....	20–21
Automatic preset programming	
Manual preset programming	
Tuning to preset radio stations .....	21

## Tape Operation/Recording

Loading tape .....	22
Playing tapes .....	23
Rewinding/Fast forwarding .....	23
General information on recording .....	23
Preparation for recording .....	24
One touch recording .....	24
CD Synchronized start recording .....	24
Dubbing tapes .....	24

## Clock/Timer

View clock .....	25
Clock setting .....	25
Timer setting .....	25–26
Deactivating the timer	
Activating the timer	
Sleep timer setting .....	26

## External sources

Listening to external sources .....	27
-------------------------------------	----

## Maintenance .....

## Specifications .....

## Troubleshooting .....





## General Information

***This system complies with the FCC rules, Part 15 and with 21 CFR 1040.10.***

***Operation is subject to the following two conditions:***

- ***This device may not cause harmful interference, and***
- ***This device must accept any interference received, including interference that may cause undesired operation.***

### Supplied accessories

- 2 speaker boxes
- remote control
- batteries (two AA size) for remote control
- AM loop antenna
- FM wire antenna
- AC power cord

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).


Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Safety information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- The lens may cloud over when the system is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the system in the warm environment until the moisture evaporates.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- **When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**



## Preparations

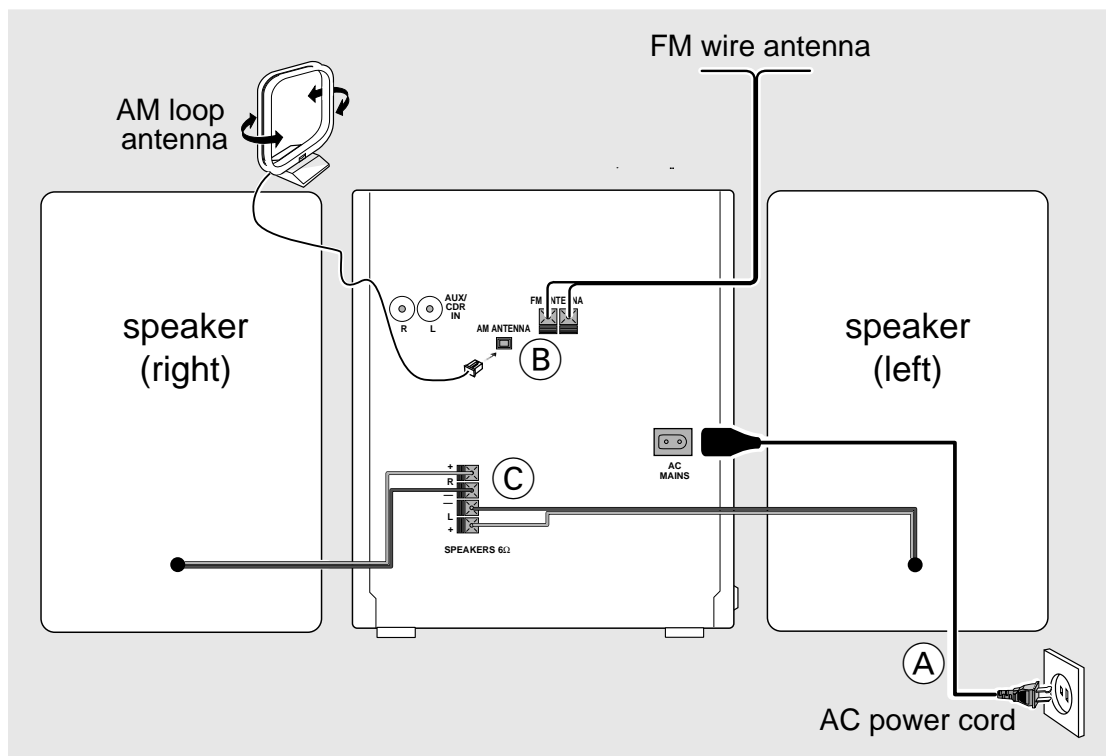

### Rear connections

*The type plate is located at the rear of the system.*

#### (A) Power

Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.

#### **WARNING!**


- For optimal performance, use only the original power cable.
- Never make or change any connections with the power switched on.

*To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).*

#### (B) Antennas Connection

Connect the supplied AM loop antenna and FM antenna to the respective terminals. Adjust the position of the antenna for optimal reception.

#### AM Antenna

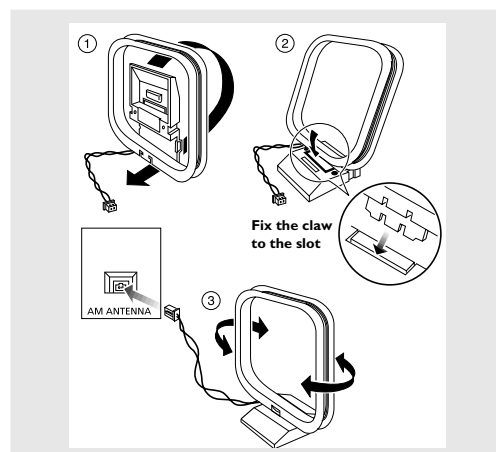


- Position the antenna as far as possible from a TV, VCR or other radiation source.



## Preparations

### FM Antenna

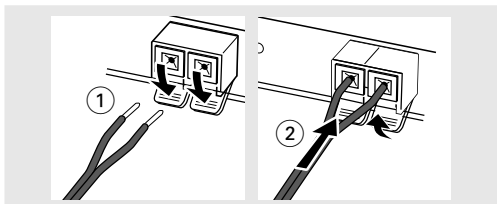


- For better FM stereo reception, connect an outdoor FM antenna to the FM ANTENNA terminal.

### Speakers Connection

#### Front Speakers

Connect the speaker wires to the SPEAKERS terminals, right speaker to "R" and left speaker to "L", colored (marked) wire to "+" and black (unmarked) wire to "-".

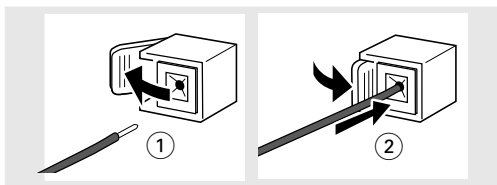

- Fully insert the stripped portion of the speaker wire into the terminal as shown.

#### Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of + / - speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

### Optional connection

The optional equipment and connecting cords are not supplied. Refer to the operating instructions of the connected equipment for details.

### Connecting other equipment to your system


Use a cinch cable to connect **AUX/CDR IN** to the analogue audio out terminals of an external equipment (TV, VCR, Laser Disc player, DVD player or CD Recorder).

#### Note:

- If you are connecting equipment with a mono output (a single audio out terminal), connect it to the AUX/CDR IN left terminal. Alternatively, you can use a "single to double" cinch cable (the output sound still remain mono).

### Inserting batteries into the remote control

Insert two batteries (type R06 or AA) into the remote control with the correct polarity as indicated by the "+" and "-" symbols inside the battery compartment.

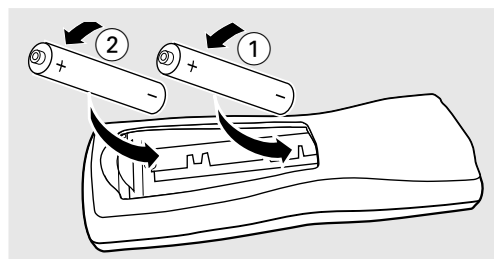


#### CAUTION!

- Remove batteries if they are exhausted or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed off properly.

## Controls (illustrations on page 3)

### Controls on the system and remote control

- ① **STANDBY ON** 
  - to switch the system on or to standby mode.
- ② **ECO POWER**
  - to switch the system on or to Eco Power standby mode.
- ③ **DISC 1/2/3 (CD DIRECT 1/2/3)**
  - to select a disc tray for playback.
- ④ **Source selection** – to select the following:
  - CD** (CD 1•2•3)
    - to select disc tray 1, 2 or 3.
  - TUNER** (FM•AM)
    - to select waveband : FM or AM.
  - TAPE** (TAPE 1•2)
    - to select tape deck 1 or 2.
  - AUX** (VIDEO/CDR)
    - to select the input for an additional appliance : AUX or CDR.
- ⑤ **Mode Selection**
  - ◀ ▶ SEARCH•TUNING**
    - for CD ..... to search backward/forward.
    - for Tuner ..... to tune to a lower or higher radio frequency.
    - for Tape ..... to rewind or fast forward.
    - for Clock ..... (on the system only) to set the hour.
  - STOP•CLEAR (DEMO STOP)**
    - for CD ..... to stop playback or to clear a program.
    - for Tuner ..... (on the system only) to stop programming.
    - for Tape ..... to stop playback or recording.
    - for Demo ..... (on the system only) to activate/deactivate the demonstration.
    - for Clock ..... (on the system only) to exit clock setting or cancel timer.
    - for Plug & Play... (on the system only) to exit plug & play mode.

### ▶ II PLAY•PAUSE

- for CD ..... to start or interrupt playback.
- for Tape ..... to start playback.
- for Plug & Play... (on the system only) to initiate and start plug & play mode.

### ◀ PREV / ▶ NEXT (▼ PRESET ▲)

- for CD ..... to skip to the beginning of the current, previous, or next track.
- for Tuner ..... to select a preset radio station.
- for Clock ..... (on the system only) to set the minute.

### ⑥ SOUND NAVIGATION

- to select and activate the JOG control for the desired sound feature : DBB, DSC or VEC.

### ⑦ JOG

- to select the desired sound effect for the selected sound feature.
  - DBB** ..... DBB 1, DBB 2 or DBB 3.
  - DSC** ..... OPTIMAL, JAZZ, ROCK or TECHNO.
  - VEC** ..... CINEMA, HALL or CONCERT.

### ⑧ INCREDIBLE SURROUND (INC. SURR.)

- to activate or deactivate the surround sound effect.

### ⑨ CLOCK•TIMER

- to view the clock, set the clock or set the timer.

### ⑩ Tape Deck Operation

#### RECORD ●

- to start recording on tape deck 2.

#### DUBBING

- to dub a tape.

#### A. REPLAY

- to select continuous playback in either AUTO REPLAY or ONCE mode only.

### ⑪ Tape deck 1

### ⑫ Tape deck 2



## Controls

### ⑬ DIM MODE

- to select different brightness for the display screen : DIM 1, DIM 2, DIM 3 or DIM OFF.

### ⑭ ▲ OPEN

- to open the tape deck door.

### ⑮ PROGRAM

- for CD ..... to program disc tracks.
- for Tuner ..... to program preset radio stations.
- for Clock ..... to select 12- or 24-hour clock mode.

### ⑯ MAX SOUND (MAX)

- to activate or deactivate the optimal mix of various sound features.

### ⑰

- to connect headphones.

### ⑱ VOLUME (VOLUME + / -)

- to increase or decrease the volume.

### ⑲ Disc tray

### ⑳ OPEN•CLOSE

- to open or close the disc tray.

### ㉑ DISC CHANGE

- to change disc(s).

### ㉒ Display screen

- to view the current status of the system.

### ㉓ REPEAT

- to playback track(s)/disc(s)/program repeatedly.

### ㉔ SLEEP

- to activate/deactivate or set the sleep timer.

### ㉕ SHUFFLE

- to playback all available discs and their tracks/program in random order.

### ㉖


- to switch the system to standby mode.
- to switch the system to Eco Power standby mode.

#### Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example CD or TUNER).
- Then select the desired function (for example ►, ◀, ▶).

# Basic Functions

English

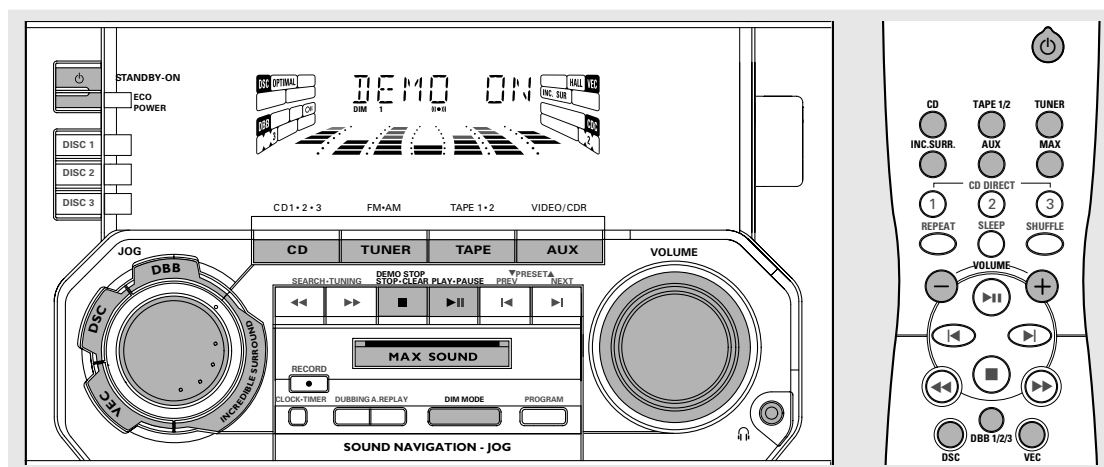

## IMPORTANT!

**Before you operate the system, complete the preparation procedures.**

## Plug and Play

Plug and Play allows you to store all available radio stations automatically.

### First time setup/power up

- 1 When you turn on the main supply, "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press ►|| on the system to start installation.
  - "INSTALL" is displayed, followed by "TUNER" and "AUTO".
  - PROG starts flashing.
  - All available radio stations with sufficient signal strength will be stored automatically, starting from FM and followed by AM band.
  - When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station will be played.

### To reinstall Plug and Play

- 1 In standby or demonstration mode, press and hold ►|| on the system until "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press ►|| again to start installation.
  - All previously stored radio stations will be replaced.

## To exit without storing the Plug and Play

- Press ■ on the system.
  - If you do not complete the Plug and Play installation, the function will be restarted when you next turn on the main supply again.

### Notes:

- When the power is turned on, the disc tray may open and close to initialize the system.
- If no stereo frequency is detected during Plug and Play, "CHECK ANTENNA" will be displayed.
- During Plug and Play, if no button is pressed within 15 seconds, the system will exit Plug and Play mode.

## Demonstration mode

The system has a demonstration mode that shows the various features offered by the system.

### To activate the demonstration

- In standby mode, press and hold ■ on the system until "DEMO ON" is displayed.
  - The demonstration will begin.

### To deactivate the demonstration

- Press and hold ■ on the system until "DEMO OFF" is displayed.
  - The system will switch to standby mode.



## Basic Functions

### Switching the system on

#### In standby/demonstration mode


- Press **STANDBY ON** to switch on the last selected source.
- Press **CD, TUNER, TAPE (TAPE 1/2), or AUX**.
- Press **OPEN•CLOSE**.  
→ The system will switch to CD mode.

#### In Eco Power standby mode


- Press **ECO POWER** to switch on the last selected source.
- Press **CD, TUNER, TAPE 1/2 or AUX** on the remote control.

### Switching the system to standby mode


#### In demonstration mode

- Press and hold  on the system.

#### In any other source mode (except Eco Power standby mode)

- Press **STANDBY ON** (or  on the remote control).  
→ The clock will appear on the display when the system is in standby mode.

### Switching the system to Eco Power standby mode (< 1 Watt)

- Press **ECO POWER** (or press and hold  on the remote control).  
→ "ECO PWR" is displayed, then the display screen will go blank.  
→ The low power ECO POWER LED will be lighted.

#### Note:

– If you have not deactivated the demonstration, it will resume five seconds after the system switches to Eco Power standby or standby mode.



### Dim mode

You can select the desired brightness for the display.


- In any source mode (except Eco Power standby or standby mode), press **DIM MODE** repeatedly to select DIM 1, DIM 2, DIM 3 or DIM OFF display mode.  
→ **DIM** is shown, except for DIM OFF mode.


DIM mode	Brightness	Spectrum Analyser
1	normal	off
2	half	on
3	half	off
OFF	normal	on

### Volume control

Adjust **VOLUME** to increase (turn knob clockwise or press VOLUME ) or decrease (turn knob counter-clockwise or press VOLUME ) the sound level.

### To listen through the headphones

- Connect the headphones plug to the  socket at the front of the system.  
→ The speakers will be muted.

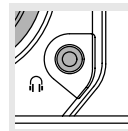

## Basic Functions

### Sound navigation

**For optimal sound listening, select only one of the following navigation sound controls at a time : DSC, VEC or MAX SOUND.**


#### MAX Sound

MAX sound provides the best mixture of various sound features (DSC, VEC, DBB, for example).

- Press **MAX SOUND** (or **MAX** on the remote control) repeatedly.
  - If activated, **MAX SOUND** is shown and the MAX SOUND button lights up.
  - If deactivated, "MAX OFF" is displayed.

**Note:**

– When MAX sound is selected, all other sound navigation will switch off automatically.

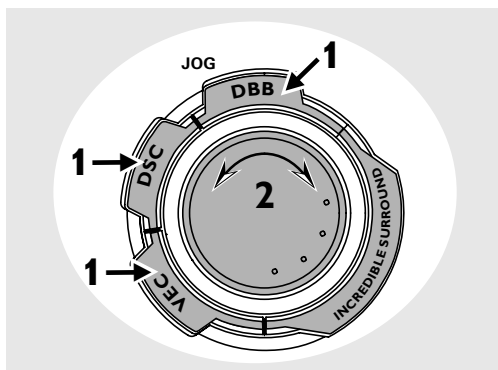

#### VEC (Virtual Environment Control)

The VEC feature enables you to adjust the system to select a type of environment.

- 1 Press **VEC**.
  - The selected VEC is shown.
- 2 Adjust the **JOG** control (or press **VEC** on the remote control repeatedly) to select : CINEMA, HALL or CONCERT.

**Note:**

– When you select VEC, Incredible Surround will switch on automatically.

### DSC (Digital Sound Control)

The DSC feature enables you to enjoy special sound effects that have preset equalizer settings, providing the best music reproduction.

- 1 Press **DSC**.
  - The selected DSC is shown.
- 2 Adjust the **JOG** control (or press **DSC** on the remote control repeatedly) to select : OPTIMAL, JAZZ, ROCK or TECHNO.

### DBB (Dynamic Bass Boost)

There are three DBB settings to enhance the bass response.

- 1 Press **DBB**.
  - The selected **DBB** is shown, except for DBB OFF mode.
- 2 Adjust the **JOG** control (or press **DBB 1/2/3** on the remote control repeatedly) to select : DBB 1, DBB 2, DBB 3 or DBB OFF.

**Note:**

– Some discs or tapes might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off DBB or reduce the volume.

### Automatic DSC-DBB selection

The best DBB setting is generated automatically for each DSC selection. You can manually select the DBB setting that best suits your listening environment.

DSC	DBB
JAZZ	off
ROCK	on (3)
TECHNO	on (3)
OPTIMAL	on (2)

### Incredible Surround

The Incredible Surround magnifies the virtual distance between the front speakers for an incredibly wide, enveloping, stereo effect.


- Press **INCREDIBLE SURROUND** (or **INC. SURR.** on the remote control) repeatedly.
  - If activated, **INC. SUR** is shown and "INC SURROUND" is displayed.
  - If deactivated, "IS OFF" is displayed.





## CD Operation

English

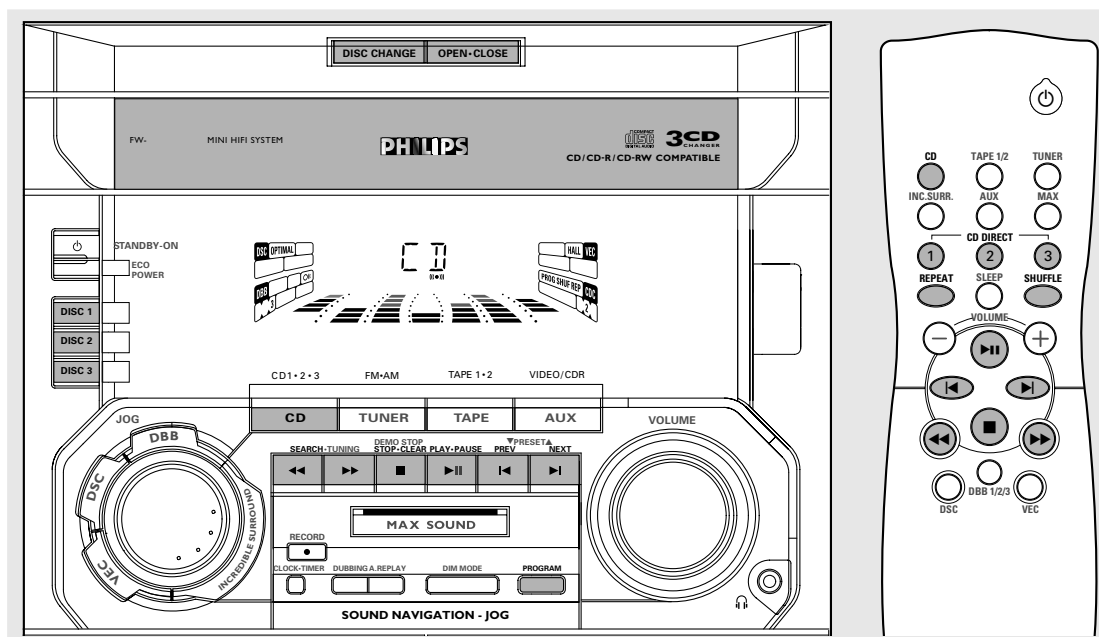

### IMPORTANT!

- This system is designed for regular discs. Therefore, do not use any accessories such as disc stabilizer rings or disc treatment sheets, etc., as offered on the market, because they may jam the changer mechanism.
- Do not load more than one disc into each tray.


### Discs for playback

This system can playback all digital audio CD, finalized digital audio CD-Recordable (CDR) discs and finalized digital audio CD-Rewritable (CDRW) discs.



### Loading discs

- 1 Press **OPEN•CLOSE** to open the disc tray.
- 2 Load up to two discs on the individual disc trays. To load the third disc, press **DISC CHANGE**.  
→ The disc tray will rotate until the empty tray is ready for loading.

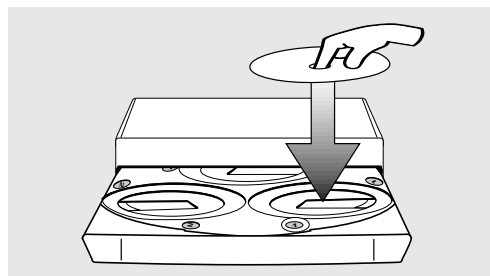

- 3 Press **OPEN•CLOSE** to close the disc tray.  
→ "READING" is displayed. The selected disc tray, total number of tracks and the playing time will appear on the display.  
→ A lighted button indicates that a disc is loaded on the disc tray.

### Notes:

- Load the discs with the label side facing up.
- To ensure good system performance, wait until the disc tray completely reads the disc(s) before proceeding.

## CD Operation

### Playing discs

#### To play all discs on the disc tray

- Press ►||.
- All the available discs will play once, then stop.
- During playback, the selected disc tray, track number and elapsed playing time of the current track are displayed.

#### To play the selected disc only

- In CD mode, press **DISC 1/2/3** (or **CD DIRECT 1/2/3** on the remote control).
- The selected disc will play once, then stop.

#### To interrupt playback

- Press ►||.
- The current track time flashes.
- To resume playback, press ►|| again.

#### To stop playback

- Press ■.

### Selecting a desired track/passage

#### To search for a particular passage during playback

- Press and hold ◀◀ or ▶▶ and release it when the desired passage is located.
- During searching, the volume will be reduced.

#### To select a desired track

- Press ◀ or ▶ repeatedly until the desired track is displayed.
- If playback is stopped, press ►|| to start playback.

#### Note:

– In Shuffle mode, pressing ◀ will cause the player to skip only to the beginning of the current track.

#### To skip to the beginning of the current track during playback

- Press ◀ once.

### Replacing discs during playback

- 1 Press **DISC CHANGE**.  
→ The disc tray will open without interrupting current playback.
- 2 To change the inner disc, press **DISC CHANGE** again.  
→ "DISC CHANGE" is displayed and the disc will stop playing.  
→ The disc tray will close to retrieve the inner disc, then reopen with the inner disc accessible.

### Repeat and Shuffle

You can select and change the various play modes before or during playback.

#### Repeat play

- 1 Press **REPEAT** on the remote control repeatedly to select :  
→ "TRACK" – to repeat playback of the current track.  
→ "DISC" – to repeat playback of the current disc.  
→ "ALL DISC" or "PROGRAM" – to repeat playback of all available discs or programmed tracks.
- 2 To resume normal playback, press **REPEAT** until "OFF" is displayed.  
→ REP is shown, except for REPEAT OFF mode.

#### Random play

- 1 Press **SHUFFLE** on the remote control.  
→ SHUF is shown and "SHUFFLE" is displayed.  
→ All the available discs or programmed tracks (if program is active) will be played in random order.
- 2 To resume normal playback, press **SHUFFLE** again.  
→ SHUF disappears.

#### Notes:

– During program play or shuffling mode, it is not possible to repeat playback the current disc (Repeat Disc mode).  
– Pressing the OPEN•CLOSE button will cancel all repeat and shuffling modes.



## CD Operation

### Programming the disc tracks

Programming tracks is possible when playback is stopped. Up to 40 tracks can be stored in the memory in any order.

- 1 Load the desired discs on the disc tray (refer to "Loading discs").
- 2 Press **PROGRAM** to start programming.  
→ **PROG** starts flashing.
- 3 Press **CD** or **DISC 1/2/3** to select a disc.
- 4 Press **◀** or **▶** repeatedly to select the desired track.
- 5 Press **PROGRAM** to store the track.
  - Repeat **steps 3–5** to store other discs and tracks.
- 6 To end programming, press **■** **once**.  
→ **PROG** stays and the program mode remains active.  
→ The total number of tracks programmed and the total playing time are displayed.
- 7 To start program play, press **▶||**.  
→ "PLAY PROGRAM" is displayed.

#### Notes:

- If the total playing time is more than "99:59" or if one of the programmed tracks has a number greater than 30, then "- : -" is displayed instead of the total playing time.
- If you attempt to program more than 40 tracks, "FULL" is displayed.
- If you press any of the CD DIRECT 1/2/3 buttons on the remote control, the system will play the selected disc or track, and the stored programme will be ignored temporarily. The **PROG** symbol also will disappear temporarily from the display. It will reappear when playback of the selected disc ends.
- During programming, if no button is pressed within 20 seconds, the system will exit the program mode automatically.

### To review the program

- Stop playback and press **◀** or **▶** repeatedly.
- To exit review mode, press **■**.

### Erasing the program

- Press **■** **once** when playback is stopped or **twice** during playback.  
→ **PROG** disappears and "PROGRAM CLEARED" is displayed.


#### Note:

- The program will be erased when the system is disconnected from the power supply or when the disc tray is opened.

**For Recording, please refer to "Tape Operation/Recording".**



## Radio Reception

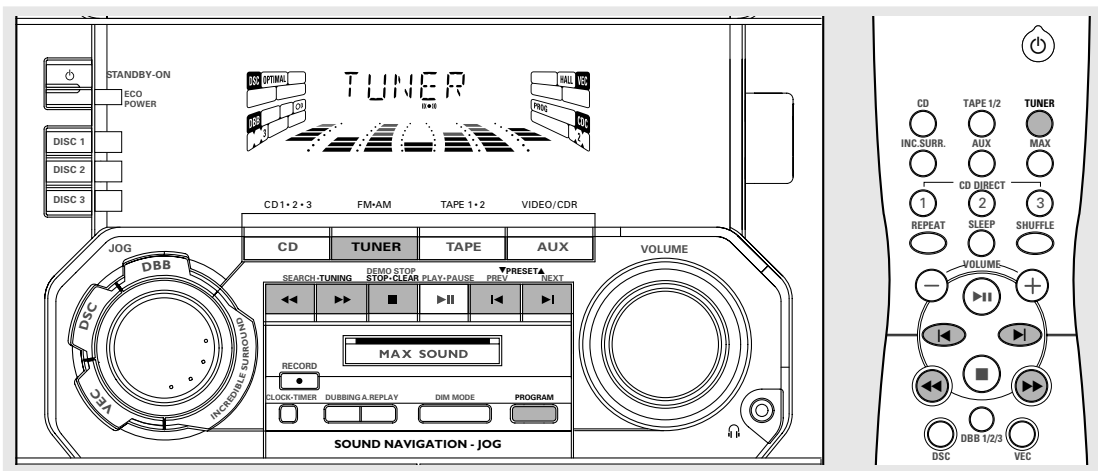

### Tuning to radio stations

- 1 Press **TUNER** to select TUNER mode.  
→ "TUNER" is displayed. A few seconds later, the current radio frequency will appear on the display.
  - 2 Press **TUNER** again to select the desired waveband : FM or AM.
  - 3 Press and hold ◀◀ or ▶▶ until the frequency indication starts to change, then release.  
→ The display will show "SEARCH" until a radio station with sufficient signal strength is found.
  - 4 Repeat step 3 if necessary until you find the desired radio station.
- To tune to a weak station, press ◀◀ or ▶▶ briefly and repeatedly until optimal reception found.

### Storing preset radio stations

You can store up to 40 preset radio stations in the memory.

#### Automatic Preset Programming

- Plug and Play setting (refer to "Basic Functions - Plug and Play").
- OR

- 1 Press **TUNER** to select TUNER mode.

#### To begin automatic preset from a desired preset number

- Press ◀ or ▶ to select the desired preset number.  
→ If a radio station has been stored in one of the presets, it will not be stored again under another preset number.
- 2 Press and hold **PROGRAM** until "AUTO" is displayed.  
→ **PROG** starts flashing.  
→ All available radio stations with sufficient signal strength will be stored automatically, starting from FM and followed by AM band.  
→ When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station will be played.



## Radio Reception

### To stop storing the automatic preset

- Press **PROGRAM** or  on the system.


 
#### Note:

– If no preset number is selected, automatic preset will begin from preset (1) and all your former presets will be overridden.

### Manual Preset Programming

- 1 Tune to your desired radio station (refer to "Tuning to radio stations").
- 2 Press **PROGRAM**.
  - **PROG** starts flashing.
  - The next available preset number is displayed for selection.

### To store the radio station to another preset number

- Press  or  to select the desired preset number.
- 3 Press **PROGRAM** again to store the radio station.
  - **PROG** disappears.
- Repeat **steps 1–3** to store other radio stations.


 
### To exit manual preset mode

- Press  on the system.

#### Notes:


– If you attempt to store more than 40 preset radio stations, "FULL" is displayed.  
– During programming, if no key is pressed within 20 seconds, the system will exit the program mode automatically.

### Tuning to preset radio stations

- Once you've programmed the radio stations, press  or  to select the desired preset number.
  - The preset number, radio frequency, and waveband are displayed.

**For Recording, please refer to "Tape Operation/Recording".**

## Tape Operation / Recording

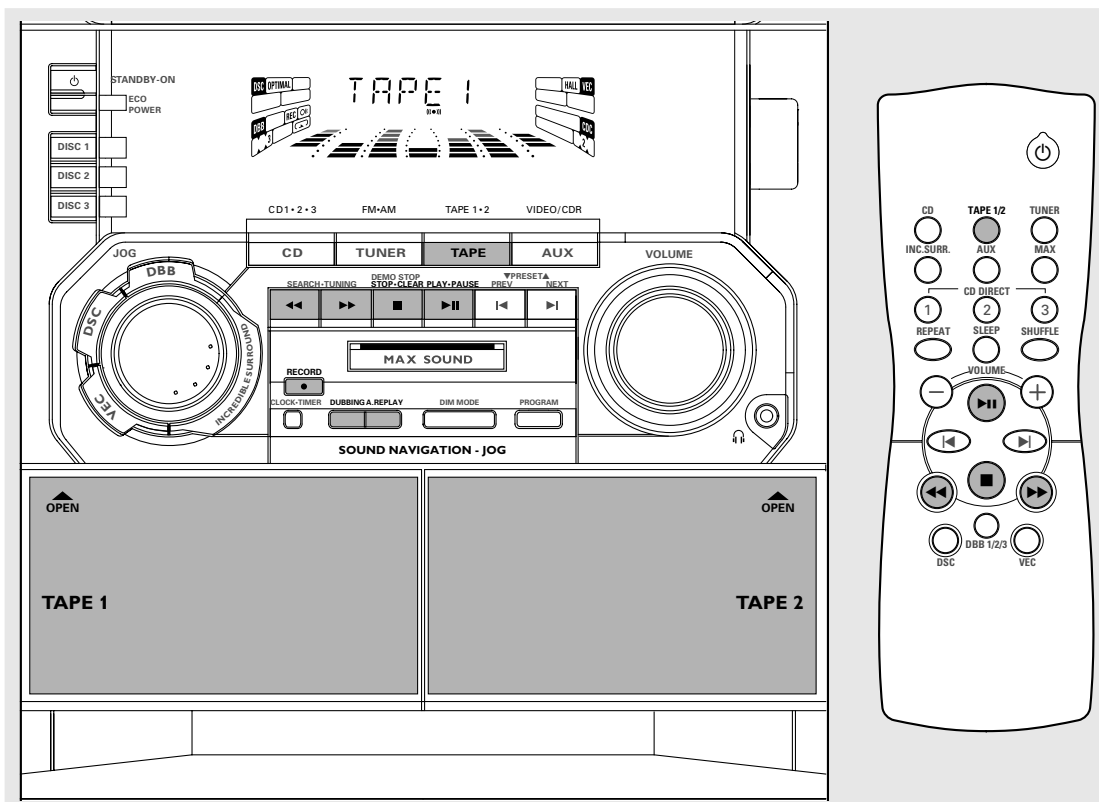


### IMPORTANT!

- Before playing a tape, check and tighten slack tape with a pencil. Slack tape may get jammed or may burst in the mechanism.
- C-120 tape is extremely thin and is easily deformed or damaged. It is not recommended for use in this system.
- Store the tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV or speaker).

### Loading tape

- 1 Press **OPEN** to open the tape deck door.

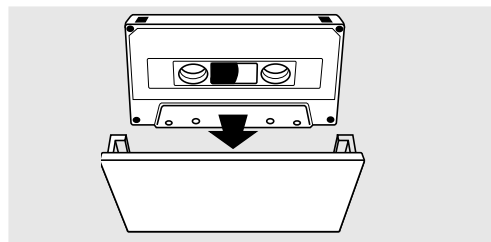

- 2 Load the tape with the open side downward and full spool to the left.
- 3 Close the tape deck door.



## Tape Operation / Recording

### Playing tapes

#### To playback a selected tape deck

- 1 Press **TAPE** (or **TAPE 1/2** on the remote control) repeatedly to select tape deck 1 or 2.
- 2 Press **▶II**.

#### To stop playback

- Press **■**.

#### To select automatic replay or one time playback

- Press **A. REPLAY** repeatedly to select the different playback modes.  
→ "AUTO REPLAY" (⏮) or "ONCE" (⏪) is displayed.

**AUTO REPLAY** ...the tape will rewind automatically at the end of playback and replay again. It will replay up to a maximum of 20 times.

**ONCE** .....the tape will playback the selected side once and then stop.

### Rewinding / Fast forwarding



- 1 Stop playback, press **◀◀** or **▶▶**.  
→ The tape will stop automatically at the end of rewinding or fast forwarding.
- 2 Press **■** to stop rewinding or fast forwarding.

#### Note:

– During rewinding or fast forwarding of a tape, it is also possible to select another source (CD or TUNER, for example).

### General information on recording

- For recording, use only tape of IEC type I (normal tape).
- The recording level is set automatically, regardless of the position of the Volume, DBB, DSC and so forth.
- The tape is secured at both ends with leader tape. At the beginning and end of the tape, nothing will be recorded for six to seven seconds.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.
- If "CHECK TAPE" is displayed, the protection tab has been broken. Put a piece of clear adhesive tape over the opening.

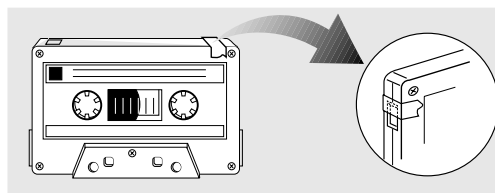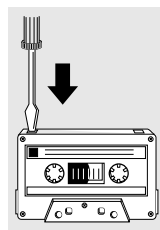

#### IMPORTANT!

- Recording is permissible if copyright or other rights of third parties are not infringed upon.
- Recording is possible only on tape deck 2.

## Tape Operation / Recording

### Preparation for recording

- 1 Press **TAPE** to select TAPE 2.
- 2 Load a recordable tape into tape deck 2 with full spool to the left.
- 3 Prepare the source to be recorded.  
**CD** – load the disc(s).  
**TUNER** – tune to the desired radio station.  
**TAPE** – load the prerecorded tape into tape deck 1 with the full spool to the left.  
**AUX** – connect external equipment.

### When recording is in progress

→ **REC** starts flashing.

- It is not possible to listen to another source, except tape dubbing.
- It is not possible to activate the timer function during recording or tape dubbing.

### One touch recording

- 1 Press **CD**, **TUNER** or **AUX** to select the source.
- 2 Start playback of the selected source.
- 3 Press **RECORD** to start recording.

### To stop recording

- Press ■ on the system.

*Note:*

– *One Touch Recording is not possible in TAPE mode, "SELECT SOURCE" is displayed.*

### CD Synchronized start recording

- 1 Press **CD** to select the disc.
  - Press ◀ or ▶ to select the desired track to start recording.
  - You can program the tracks in the order you want them to be recorded (refer to "CD Operation - Programming the disc tracks").
- 2 Press **RECORD** to start recording.  
 → The disc will start playback automatically.

### To select another track during recording

- 1 Press ▶|| to interrupt recording.
- 2 Press ◀ or ▶ to select the desired track.
- 3 Press ▶|| to resume recording.

### To stop recording

- Press ■.
- Recording and disc playback will stop simultaneously.

### Dubbing tapes

- 1 Load the prerecorded tape in tape deck 1.
  - You can set the tape to the desired passage where recording will start.
- 2 Press **DUBBING**.  
 → Playing and recording will start simultaneously.  
 → "DUB" is displayed.
  - Dubbing of tapes is possible on one side of the tape only. To continue recording on the reverse side, at the end of side A, flip the tape to side B and repeat the procedure.

### To stop dubbing

- Press ■.


*Notes:*

- *Dubbing of tapes is possible only from tape deck 1 to tape deck 2.*
- *To ensure good dubbing, use tapes of the same length.*
- *You can listen to another source while dubbing.*





## Clock/Timer

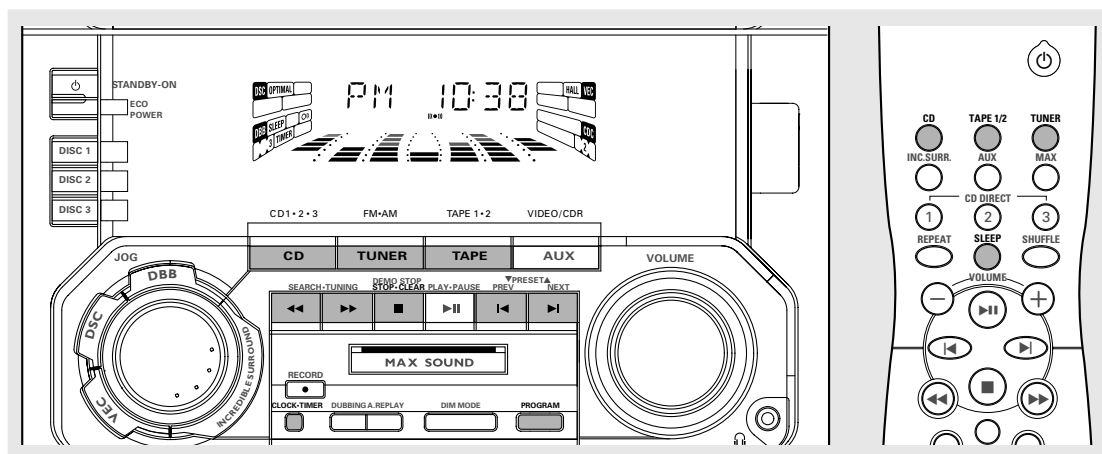

### IMPORTANT!

**When in Eco Power standby mode, it is not possible to operate the clock or timer function.**

### View clock

The clock (if it is set) will be shown in standby mode.

#### To view the clock in any source mode (CD or TUNER for example)

- Press **CLOCK•TIMER**.
  - The clock is displayed for a few seconds.
  - If the clock has not been set, "----:--" is displayed.

### Clock setting

The clock can be set in either 12-hour or 24-hour mode ("AM 12:00" or "00:00", for example)

- 1 In standby or view clock mode, press **CLOCK•TIMER** once. In other source mode, press **CLOCK•TIMER** twice.
- 2 Press **PROGRAM** repeatedly to select clock mode.
  - "AM 12:00" or "00:00" starts flashing.
- 3 Press **◀** or **▶** on the system repeatedly to set the hour.
- 4 Press **◀** or **▶** on the system repeatedly to set the minute.

- 5 Press **CLOCK•TIMER** again to store the setting.

→ The clock starts working.

#### To exit without storing the setting

- Press **■** on the system.

#### Notes:

- The clock setting will be cancelled when the power cord is disconnected or if a power failure occurs.
- During clock setting, if no button is pressed within 90 seconds, the system will exit clock setting mode automatically.

### Timer setting

The system can switch on to CD, TUNER or TAPE 2 mode automatically at a preset time, serving as an alarm to wake you up.

#### IMPORTANT!

- Before setting the timer, ensure that the clock is set correctly.
- The timer will always be switched on after it has been set.
- The timer will not start if a recording is in progress.
- The volume of the timer will increase gradually from the minimum level to the last tuned volume level.

## Clock/Timer

- 1 Press and hold **CLOCK•TIMER** for more than **two seconds** to select timer mode.  
→ "AM 12:00" or "00:00" or the last timer setting starts flashing.  
→ **TIMER** starts flashing.  
→ The selected source will be lighted while other available sources are flashing.
- 2 Press **CD, TUNER** or **TAPE** to select the desired source.
  - Before setting timer, make sure the music source has been prepared.  
**CD** – Load the disc(s). To start from a specific track, make a program (refer to "CD Operation - Programming the disc tracks").  
**TUNER** – tune to the desired radio station.  
**TAPE** – load the prerecorded tape into tape deck 2.
- 3 Press ◀ or ▶ on the system repeatedly to set the hour for the timer to start.
- 4 Press ⏮ or ⏭ on the system repeatedly to set the minute for the timer to start.
- 5 Press **CLOCK•TIMER** to store the timer.  
→ **TIMER** remains on the display.
  - At the preset time, the selected sound source will play.

### To exit without storing the setting

- Press ■ on the system.

#### Notes:

- When the preset time is reached and the selected disc tray is empty, the next available disc will be selected. If all the disc trays are not available, Tuner will be selected automatically.
- During timer setting, if no button is pressed within 90 seconds, the system will exit timer setting mode automatically.

### Deactivating the timer

- 1 Press and hold **CLOCK•TIMER** for more than **two seconds**.
- 2 Press ■ on the system to cancel the timer.  
→ "OFF" is displayed and the **TIMER** disappears.

### Activating the timer (for the same preset time and source)

- 1 Press and hold **CLOCK•TIMER** for more than **two seconds**.
- 2 Press **CLOCK•TIMER** again to store.

### Sleep timer setting

The sleep timer enables the system to switch to standby mode automatically at a preset time.

- 1 Press **SLEEP** on the remote control repeatedly to select a preset time.  
→ The selections are as follows (time in minutes):  
15 → 30 → 45 → 60 → OFF → 15 ...  
→ "SLEEP xx" or "OFF" is displayed. "xx" is the time in minutes.
- 2 When you reach the desired length of time, stop pressing the **SLEEP** button.  
→ **SLEEP** is shown, except for "OFF" mode.  
→ The sleep timer is now set. Before the system switches to standby mode, a countdown of 10 seconds is displayed.  
"SLEEP 10" → "SLEEP 9".... → "SLEEP 1"  
→ "SLEEP"

### To check the remaining length of time after sleep timer is activated

- Press **SLEEP** once.

### To change the preset sleep timer


- Press **SLEEP** again while the remaining sleep timer is shown.  
→ The display will show the next sleep timer options.

### To deactivate the sleep timer

- Press **SLEEP** repeatedly until "OFF" is displayed, or press the **STANDBY ON** button.



## External Sources

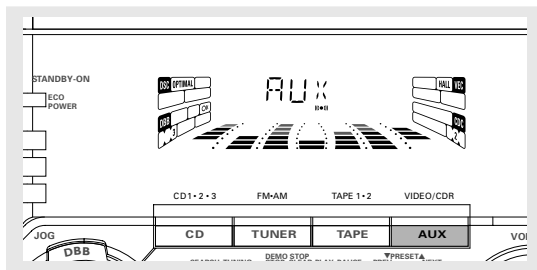

### Notes:

- All the sound control features (DSC or DBB, for example) are available for selection.
- Refer to the operating instructions for the connected equipment for details.

**For Recording, please refer to "Tape Operation/Recording".**

### Listening to external sources

- 1 Connect the audio out terminals of the external equipment (TV, VCR, Laser Disc player, DVD player or CD Recorder) to the **AUX/CDR IN** terminals of your system.
- 2 Press **AUX** to select external equipment.  
→ "AUX" or "CDR" is displayed.


## Maintenance

### Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analog records.

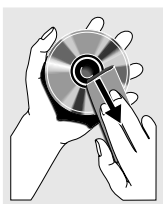


### Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

### Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You also can clean the heads by playing a cleaning tape once.

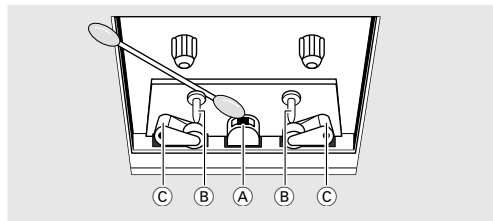

### Demagnetizing the heads

- Use a demagnetizing tape available at your dealer.

## Specifications

### AMPLIFIER

Output power ..... 240 W total power  
 ..... 2 x 120 W RMS / 2 x 100 W FTC<sup>(1)</sup>  
 Signal-to-noise ratio .....  $\geq 67$  dBA (IEC)  
 Frequency response ..... 50 – 15000 Hz  
 Input sensitivity  
   AUX/CDR In ..... 500 mV / 1V  
 Output  
   Speakers .....  $\geq 6 \Omega$   
   Headphones .....  $32 \Omega - 1000 \Omega$   
 (1) ( $6 \Omega$ , 60 Hz – 12.5 kHz, 10% THD)

### CD PLAYER

Number of programmable tracks ..... 40  
 Frequency range ..... 20 – 20000 Hz  
 Signal-to-noise ratio .....  $\geq 80$  dBA  
 Channel separation .....  $\geq 60$  dB (1 kHz)  
 Total harmonic distortion .....  $< 0.003\%$

### TUNER

FM wave range ..... 87.5 – 108 MHz  
 AM wave range ..... 530 – 1700 kHz  
 Number of presets ..... 40  
 Antenna  
   FM .....  $300 \Omega$  dipole wire  
   AM ..... Loop antenna

### TAPE PLAYER

Frequency response  
   Normal tape (type I) ..... 80 – 12500 Hz (8 dB)  
 Signal-to-noise ratio  
   Normal tape (type I) .....  $\geq 48$  dBA  
 Wow and flutter .....  $\leq 0.4\%$  DIN

### SPEAKERS

System ..... 3-way; double port bass reflex  
 Impedance .....  $6 \Omega$   
 Woofer ..... 1 x 6.5"  
 Tweeter ..... 1 x 2.5"  
 Dimensions (w x h x d)  
   ..... 8.27 x 12.40 x 9.25 (inch)  
   ..... 210 x 315 x 235 (mm)  
 Weight ..... 5.5 pounds each  
   ..... 2.5 kg each

### GENERAL INFORMATION

Material/finish ..... Polystyrene/Metal  
 AC Power ..... 120 V / 60 Hz  
 Power Consumption  
   Active ..... 175 W  
   Standby .....  $< 25$  W  
   Eco Power standby .....  $< 1$  W  
 Dimensions (w x h x d)  
   ..... 10.43 x 12.20 x 15.00 (inch)  
   ..... 265 x 310 x 381 (mm)  
 Weight (without speakers) ..... 18.7 pounds  
   ..... 8.5 kg

**Specifications and external appearance are subject to change without notice.**



## Troubleshooting

### WARNING

**Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.**

**If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to solve a problem by following these hints, consult your dealer or service center.**

Problem	Solution
<b>CD OPERATION</b>	
"NO DISC" is displayed.	<ul style="list-style-type: none"><li>– Insert a disc.</li><li>– Check if the disc is inserted upside down.</li><li>– Wait until the moisture condensation at the lens has cleared.</li><li>– Replace or clean the disc, see "Maintenance".</li></ul>
"DISC NOT FINALIZED" is displayed.	<ul style="list-style-type: none"><li>– Use a finalized CD-RW or CD-R.</li></ul>
<b>RADIO RECEPTION</b>	
Radio reception is poor.	<ul style="list-style-type: none"><li>– If the signal is too weak, adjust the antenna or connect an external antenna for better reception.</li><li>– Increase the distance between the Mini HiFi System and your TV or VCR.</li></ul>
<b>TAPE OPERATION/RECORDING</b>	
Recording or playback cannot be made.	<ul style="list-style-type: none"><li>– Clean deck parts, see "Maintenance".</li><li>– Use only NORMAL (IEC I) tape.</li><li>– Apply a piece of adhesive tape over the missing tab space.</li></ul>
The tape deck door cannot open.	<ul style="list-style-type: none"><li>– Remove and reconnect the AC power plug and switch on the system again.</li></ul>

## Troubleshooting

### GENERAL

<b>The system does not react when buttons are pressed.</b>	<ul style="list-style-type: none"> <li>– Remove and reconnect the AC power plug and switch on the system again.</li> </ul>
<b>Sound cannot be heard or is of poor quality.</b>	<ul style="list-style-type: none"> <li>– Adjust the volume.</li> <li>– Disconnect the headphones.</li> <li>– Check that the speakers are connected correctly.</li> <li>– Check if the stripped speaker wire is clamped.</li> </ul>
<b>The left and right sound outputs are reversed.</b>	<ul style="list-style-type: none"> <li>– Check the speaker connections and location.</li> </ul>
<b>The remote control does not function properly.</b>	<ul style="list-style-type: none"> <li>– Select the source (CD or TUNER, for example) before pressing the function button (▶, ◀, ▶).</li> <li>– Reduce the distance between the remote control and the system.</li> <li>– Insert the batteries with their polarities (+/- signs) aligned as indicated.</li> <li>– Replace the batteries.</li> <li>– Point the remote control directly towards the IR sensor.</li> </ul>
<b>The timer is not working.</b>	<ul style="list-style-type: none"> <li>– Set the clock correctly.</li> <li>– Press and hold CLOCK•TIMER to switch on the timer.</li> <li>– If recording or tape dubbing is in progress, stop recording.</li> </ul>
<b>Not all lighted buttons are showing light.</b>	<ul style="list-style-type: none"> <li>– Press DIM to select DIM OFF display mode.</li> </ul>
<b>The Clock/Timer setting is erased.</b>	<ul style="list-style-type: none"> <li>– Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.</li> </ul>
<b>The system displays features automatically.</b>	<ul style="list-style-type: none"> <li>– Press and hold ■ on the system to switch off the demonstration.</li> </ul>



## LIMITED WARRANTY

### AUDIO SYSTEM

One Year Free Labor

One Year Free Service on Parts

This product must be carried in for repair.

#### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

#### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter, all parts will be repaired or replaced, and labor is free. After one year from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

#### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product that is used for commercial or institutional purposes.

#### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

#### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

#### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service.

Adjustments of the controls discussed there may save you a service call.

#### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Take the product to a Philips factory service center (see enclosed list) or authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. Centers may keep defective parts.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

#### TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363 7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

#### REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

**Philips Service Solutions Group, P.O. Box 2976, Longview, Texas 75606, USA, (903) 242-4800**

EL4965E006 / MAC 4110 / 12-98